




SINGER

211G146,G151,G157

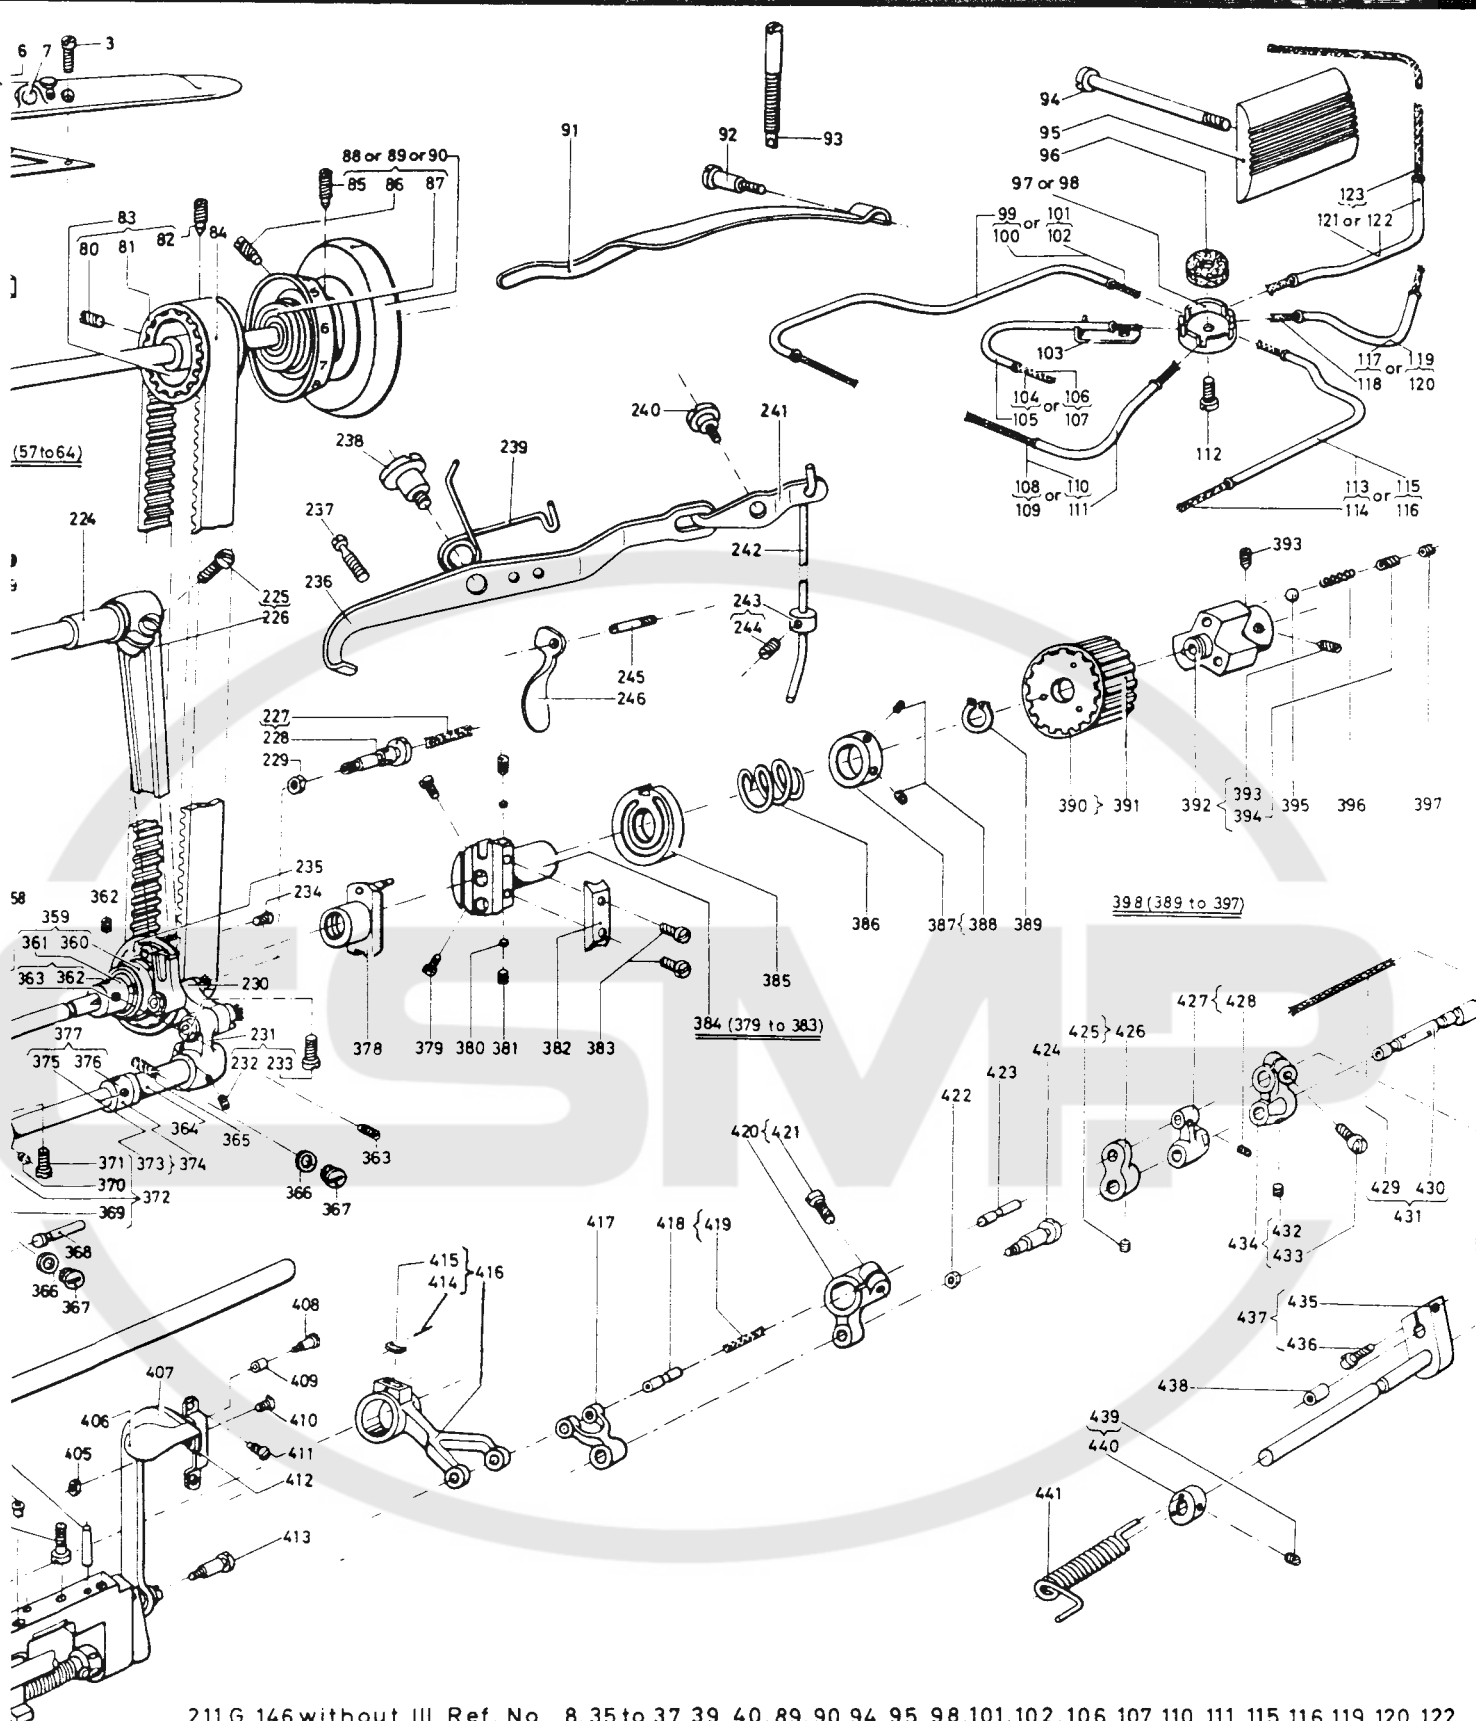

- 211 G 146 without Ill. Ref. No. 8, 35 to 37, 39, 40, 89, 90, 94, 95, 98, 101, 102, 106, 107, 110, 111, 115, 116, 119, 120, 122, 145, 148 to 163, 210 to 233, 249, 323 to 326, 341, 375 to 377, 399 to 441
- 211 G 151 without Ill. Ref. No. 9, 10, 12, 13, 16 to 18, 38, 39, 41 to 43, 88, 90, 101, 102, 106, 107, 110, 111, 115, 116, 119, 120, 122, 146, 154, 155, 171 to 192, 194, 196 to 205, 207, 248, 321, 322, 341, 375 to 377, 399 to 441
- 211 G 157 without Ill. Ref. No. 9, 35 to 38, 88, 89, 97, 99, 100, 104, 105, 108, 109, 113, 114, 117, 118, 121, 146, 150 to 153, 171 to 192, 194, 196 to 205, 207, 248, 321, 322, 341, 354 to 357, 368 to 374

SINGER


211G 146, 211G 151, 211G 157

Copyright © 1966 by THE SINGER COMPANY Form 30-290 G (Rev. 766) Printed in WESTERN GERMANY



★ THE SINGER COMPANY

★ A Trademark of
THE SINGER COMPANY

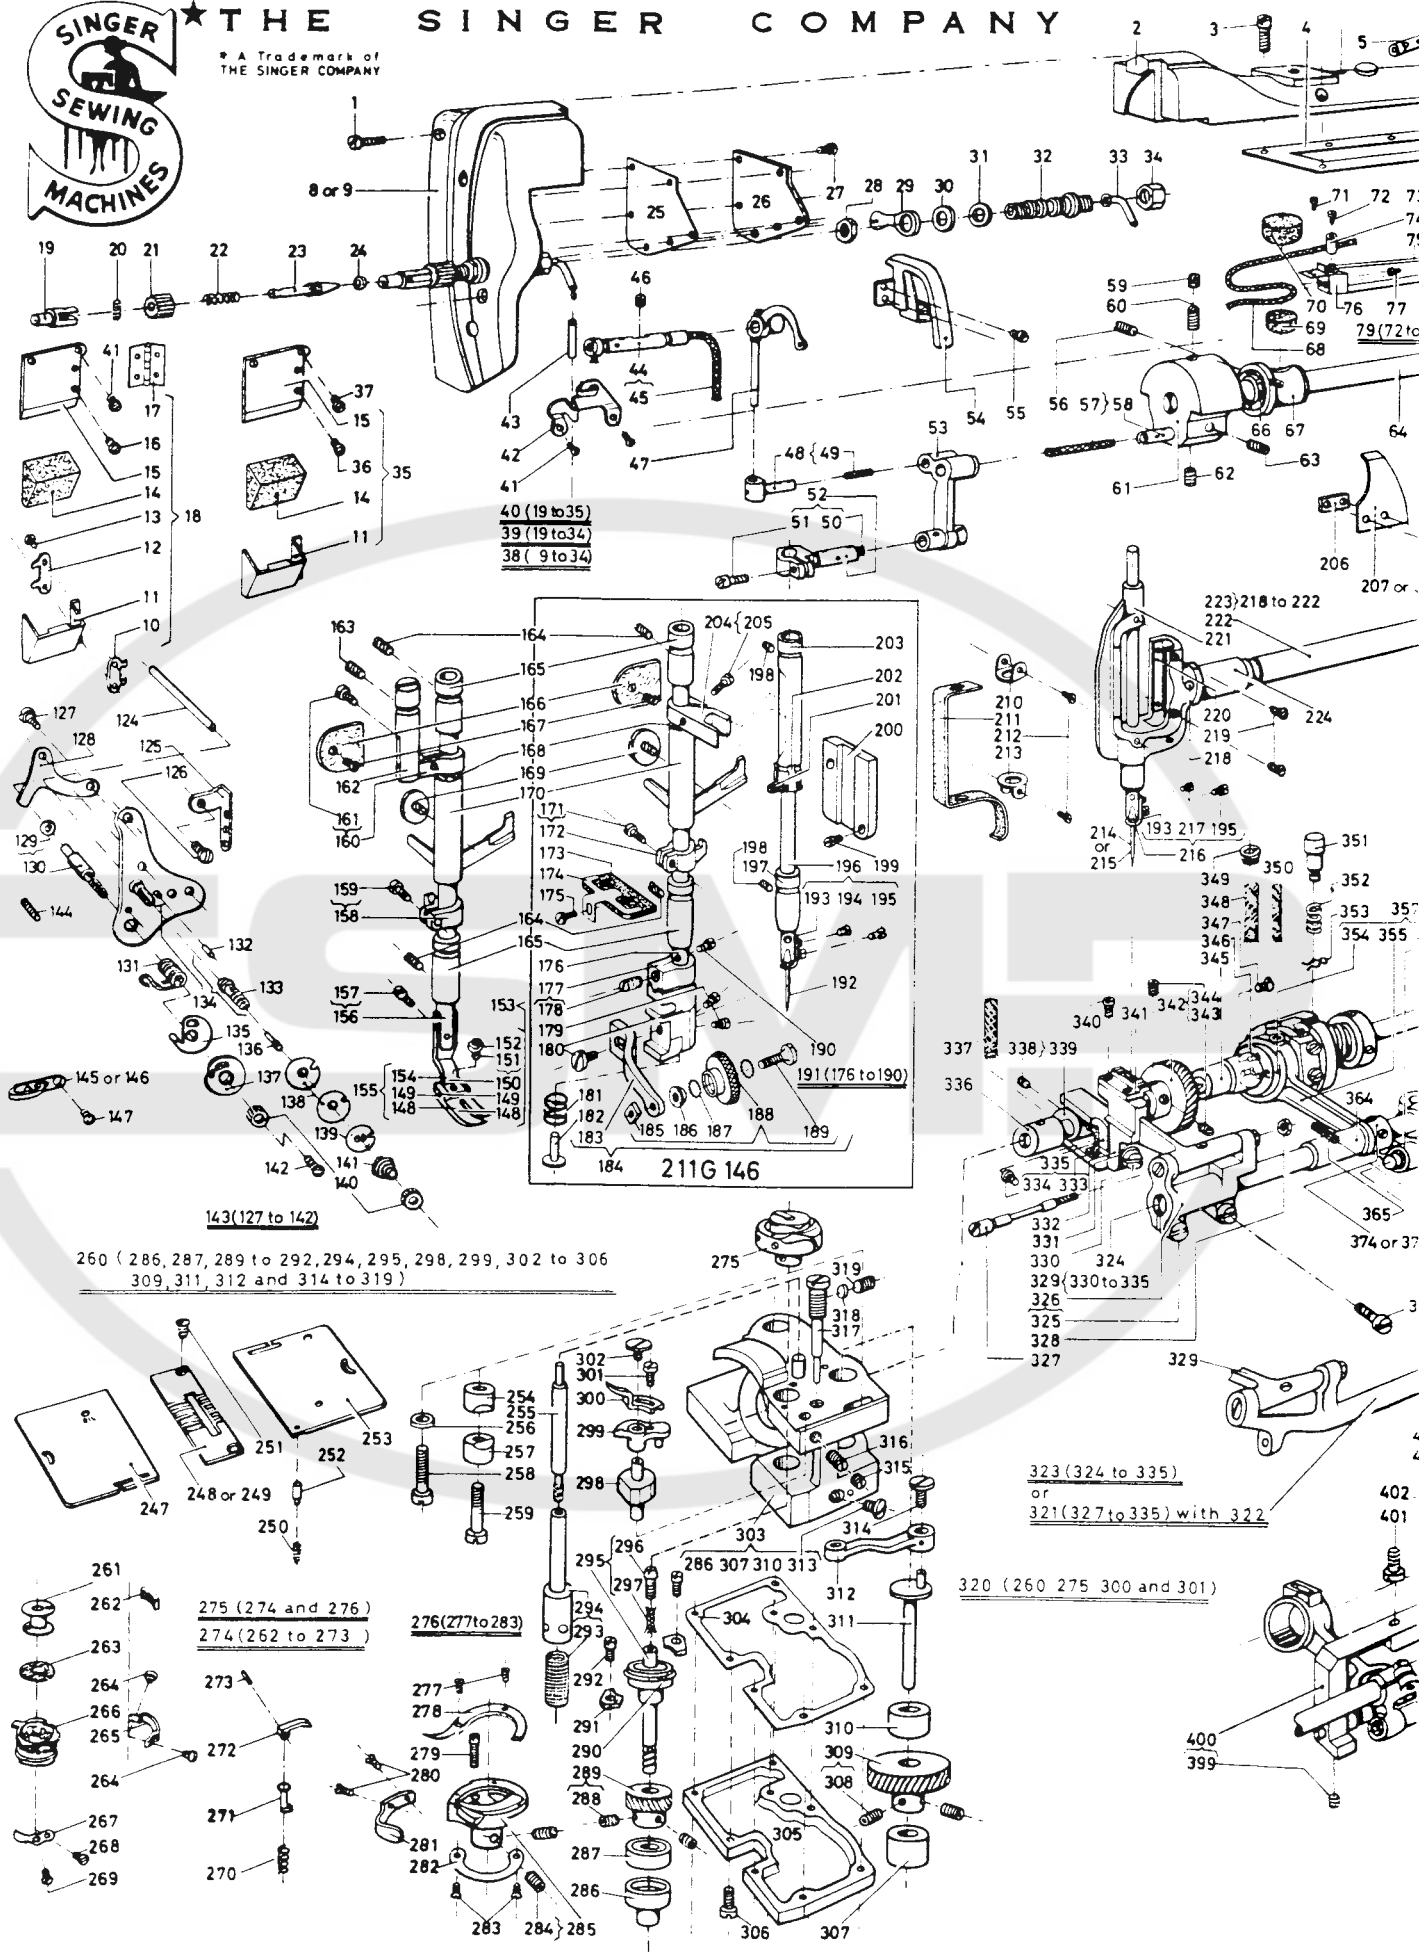

ACCESSORIES FOR 211G 146/151/157

